



## YK 800 - 8 HP

| No. | P/N     | Description                  | No. | P/N   | Description               | No. | P/N     | Description               |
|-----|---------|------------------------------|-----|-------|---------------------------|-----|---------|---------------------------|
| 1   | 31-02 M | Recoil Starter Assy (Maroon) | 17  | 36-59 | Piston Ring               | 34  | 36-72   | Valve Spring              |
| 1   | 31-02 B | Recoil Starter Assy (Black)  | 18  | 36-32 | Piston Assy.              | 35  | 01-02   | Head Cover Comp.          |
| 2   |         | Recoil Starter Cup           | 19  | 36-15 | Cam Shaft Assy.           | 36  | 99-11   | Cylinder Head Assy.       |
| 3   | 01-10   | Cooling Fan                  | 20  | 36-89 | Valve Lifter Assy         | 37  | 49-12   | Carburetor Assy.          |
| 4   | 01-59   | Fly Wheel                    | 21  | 36-84 | Push Rod                  | 38  | 49-139  | Air Cleaner/Spacer Gasket |
| 5   | 49-44   | Oil Seal                     | 22  | 01-30 | Control Assy.             | 39  | 49-129  | Carburetor Gasket         |
| 6   | 36-48   | Cylinder Barrel              | 23  | 50-06 | Head Gasket               | 40  | 33-05   | Ignition Coil Assy        |
| 7   | 33-12   | Engine Stop Switch Assy      | 24  | 36-67 | Valve Assembly In/Exhaust | 41  | 30-05   | Air Cleaner Element       |
| 8   | 33-19   | Oil Level Switch Assy.       | 25  | 07-50 | Fuel Tank Joint.          | 42  | 30-02   | Air Cleaner Assembly      |
| 9   | 36-94   | Governor Gear Assy.          | 26  | 33-42 | Spark Plug                | 43  | 01-07 M | Fan Cover Comp. (Maroon)  |
| 10  | 36-06 Q | Crankshaft Assy.             | 27  | 35-30 | Muffler Comp.             | 43  | 01-07 B | Fan Cover Comp. (Black)   |
| 11  | 50-42   | Oil Pan Gasket               | 28  | 35-27 | Muffler Protector         | 44  | 35-17   | Spark Arrester            |
| 12  | 36-118  | Crankcase and Oil Pan Assy.  | 29  | 07-10 | Fuel Filter & Holder      | 45  | 35-47   | Muffler Gasket            |
| 13  | 07-16   | Oil Dip Stick                | 30  | 07-11 | Fuel Tank Cap             | 46  | 35-49   | Ex. Pipe Gasket           |
| 14  | 49-44   | Oil Seal                     | 31  | 07-07 | Fuel Tank Assy.           | 47  | 36-77   | Balancer Weight Assy.     |
| 15  | 45-03   | Bearing                      | 32  | 35-14 | Exhaust Pipe Comp.        |     |         |                           |
| 16  | 36-25   | Connecting Rod               | 33  | 36-74 | Rocker Arm Assy.          |     |         |                           |

## Accessory Parts

| No. | P/N    | Description                            | No. | P/N   | Description                  | No. | P/N   | Description             |
|-----|--------|--|-----|-------|------------------------------|-----|-------|-------------------------|
|     | 04-02  | Recoil Starter Flange Bolt             |     | 33-21 | Oil Alert Unit               |     | 49-23 | Carburetor Float Set    |
|     | 30-107 | Air Cleaner Grommet                    |     | 33-48 | Electric Starter Motor Assy. |     | 49-86 | Carb. Choke Lever Comp. |
|     | 30-115 | Air Cleaner Wing Nut                   |     | 35-03 | Muffler Assy                 |     | 49-98 | Generator Carb. Assy.   |
|     | 33-15  | Noise Suppressor Cap / Spark Plug Boot |     | 49-03 | Carburetor Repair Kit        |     | 99-04 | Cylinder Barrel Assy.   |
|     | 33-19  | Oil level Switch Assy                  |     | 49-20 | Carb. Float Chamber Set      |     |       |                         |